

PARTS LIST

HT230DL

CONTENTS


1. MAIN BODY	1 ~ 4
2. ACCESSORIES	5 ~ 6
3. ENGINE	7 ~ 10
4. CARBURETOR, RECOIL STARTER	11 ~ 12

2015. 08.




P/N 522109-7

1. HT230DL
MAIN BODY

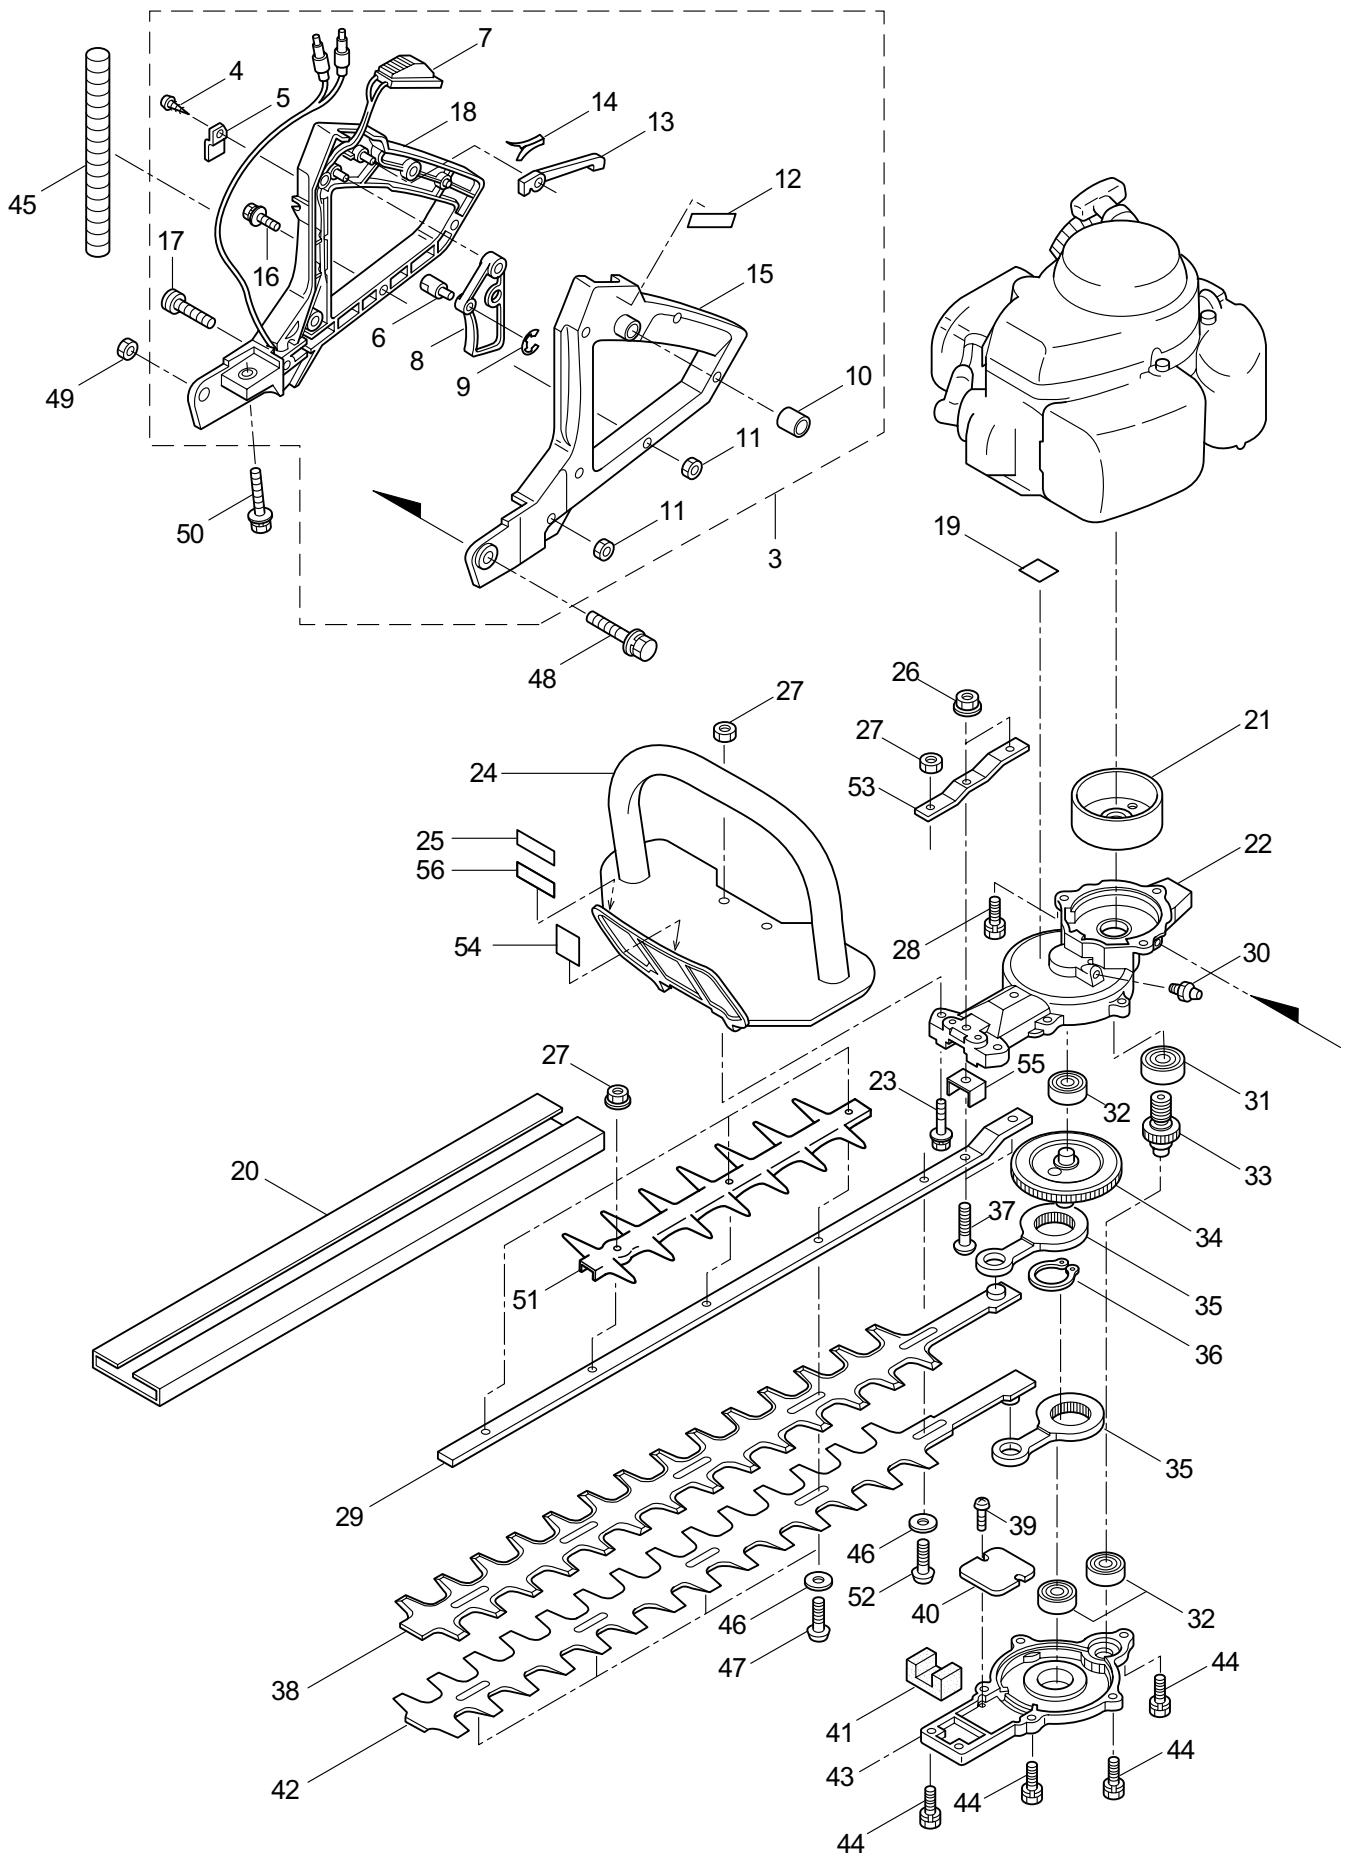




Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	362177	HT230DL	1	
1-2	270249	Cutter Ass'y	1	
1-3	270240	Rear Handle Ass'y	1	Incl.4-18
1-4	997258	Screw	1	M4x10
1-5	997259	Holder,Cable	1	
1-6	997260	Swivel	1	
1-7	270145	Switch,Stop	1	
1-8	997262	Lever,Throttle	1	
1-9	997263	E-Ring	1	#2.5
1-10	270274	Bush	1	
1-11	270233	U-Nut	6	M4
1-12	270085	Label	1	
1-13	270083	Stop Lever	1	
1-14	270370	Spring	1	
1-15	270098	Rear Handle (L)	1	
1-16	997268	Screw	5	M4x16
1-17	997269	Screw	1	M4x30
1-18	270099	Rear Handle (R)	1	
1-19	266960	Label	1	
1-20	270071	Cover of Blade	1	
1-21	270021	Drum	1	
1-22	270760	Upper Case	1	
1-23	581910	Bolt	2	M6x40
1-24	270241	Front Handle	1	
1-25	266957	Label	1	
1-26	127226	Nut	2	M5
1-27	991941	U-Nut	7	M6
1-28	270030	Bolt	2	M6x20
1-29	270056	Guide Plate	1	
1-30	991937	Grease Nipple	1	M6
1-31	580767	Bearing	1	#6001 2RS
1-32	270423	Bearing	3	
1-33	584666	Pinion	1	
1-34	591443	Crank Comp	1	
1-35	271466	Rod	2	
1-36	580777	Snap Ring	1	#26
1-37	991931	Screw	2	M5x20
1-38	582446	Upper Blade	1	
1-39	991924	Screw	2	M3x5
1-40	991919	Plate,Rod Slide	1	
1-41	270758	Felt	1	
1-42	582428	Lower Blade	1	
1-43	270756	Lower Case	1	
1-44	580791	Bolt	7	M5x16
1-45	270023	Tube	1	

1. HT230DL
MAIN BODY

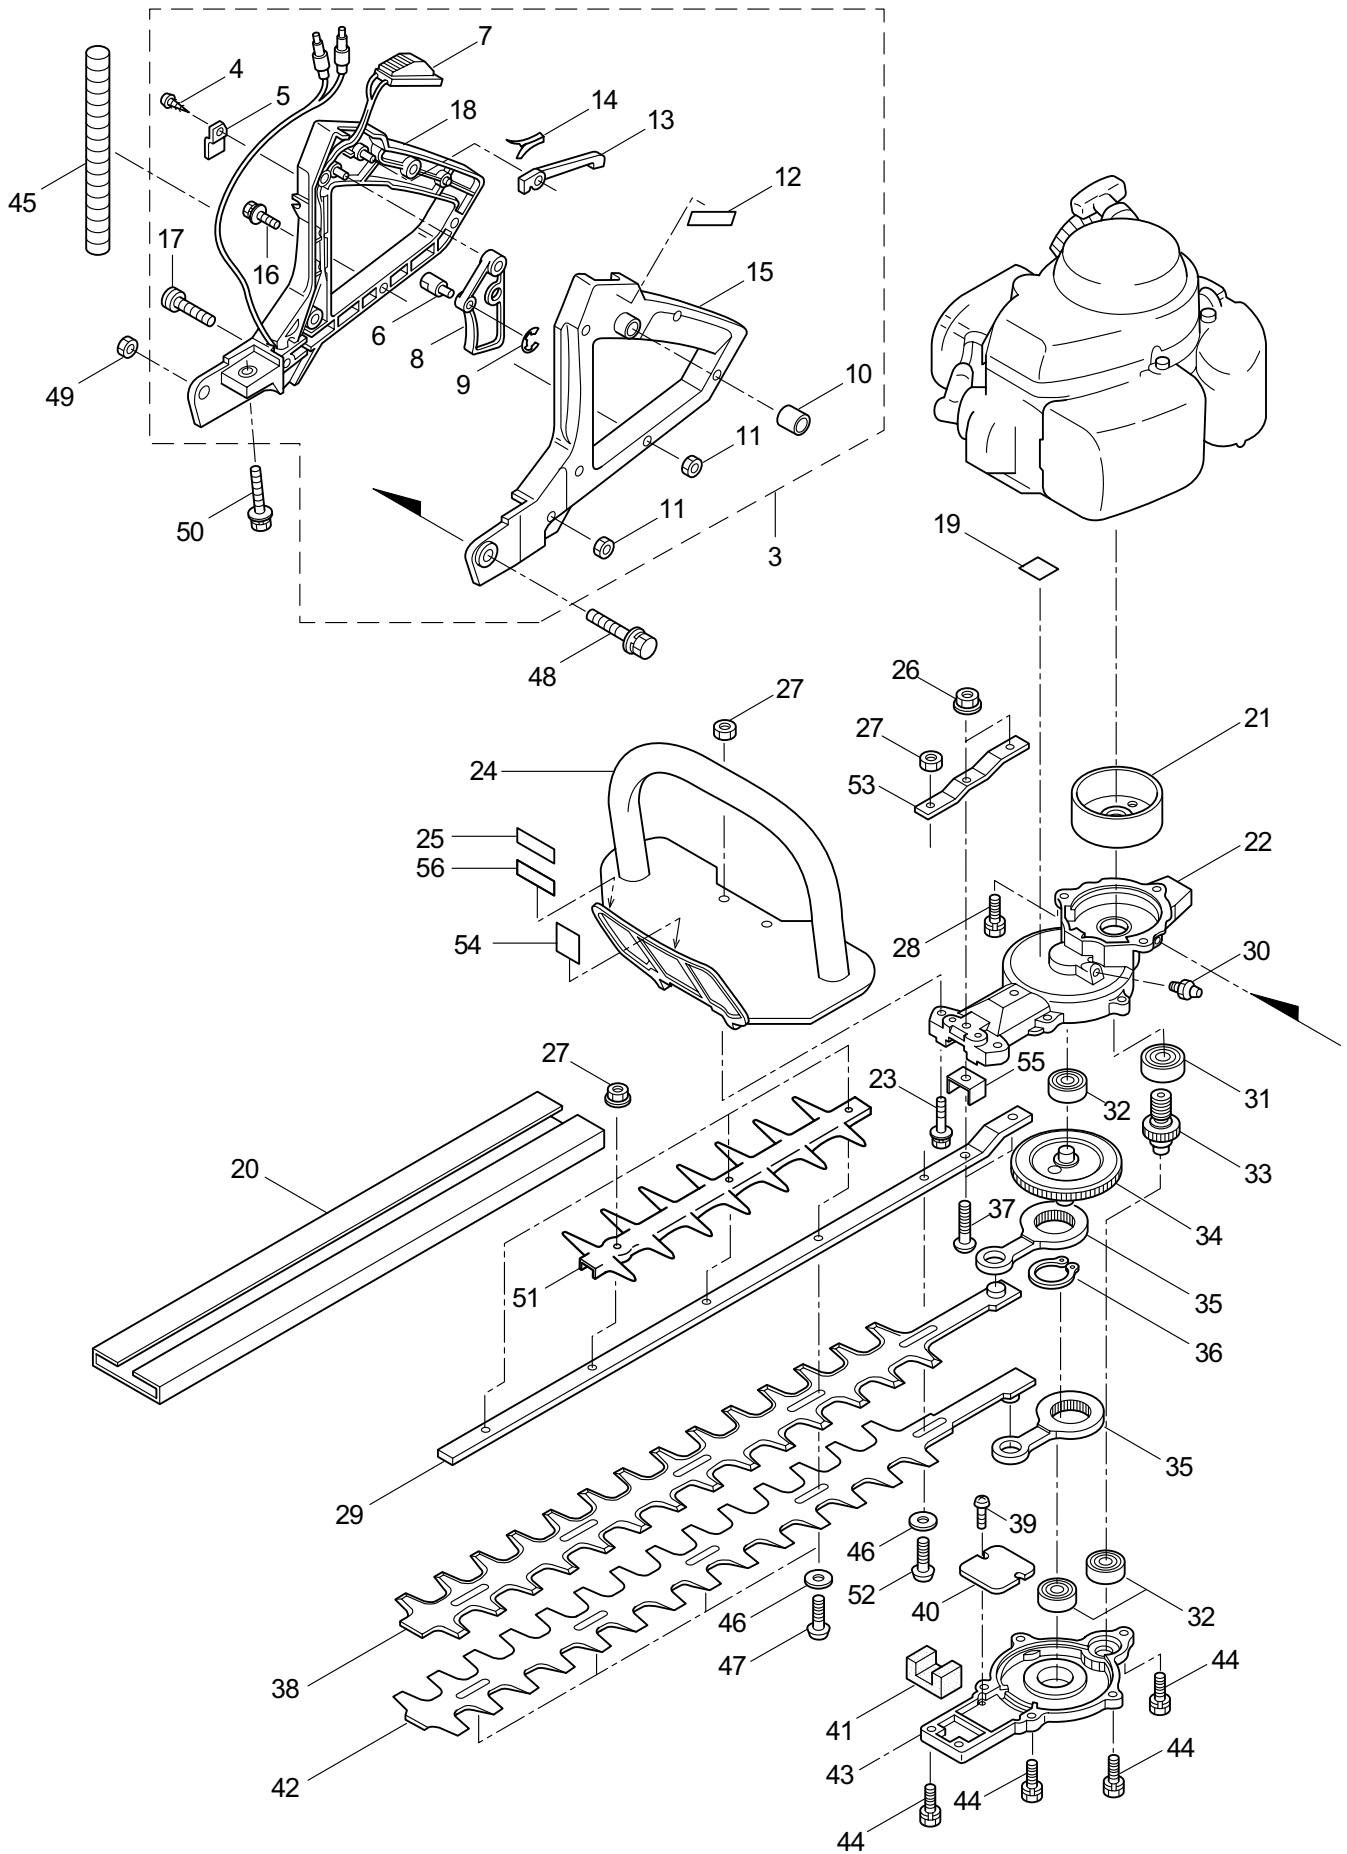


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-46	991913	Washer	5	
1-47	991914	Screw	4	
1-48	270119	Bolt	1	M6x50
1-49	997253	Nut	1	M6
1-50	270120	Bolt	1	M6x40
1-51	274877	Blade Guard	1	
1-52	991912	Screw	1	
1-53	270759	Reinforcing Plate	1	
1-54	269426	Label	1	106dB
1-55	270757	Plate	1	
1-56	270566	Label	1	

2. HT230DL
ACCESSORIES

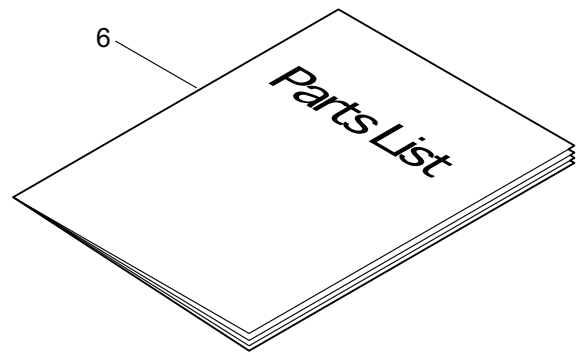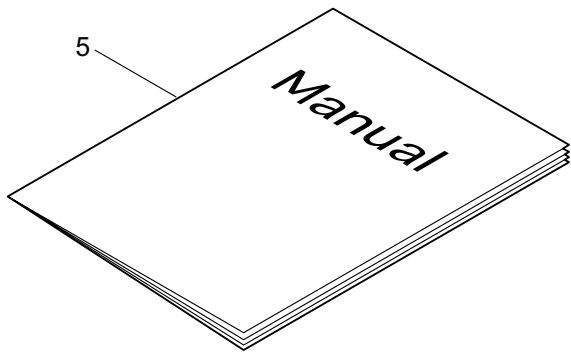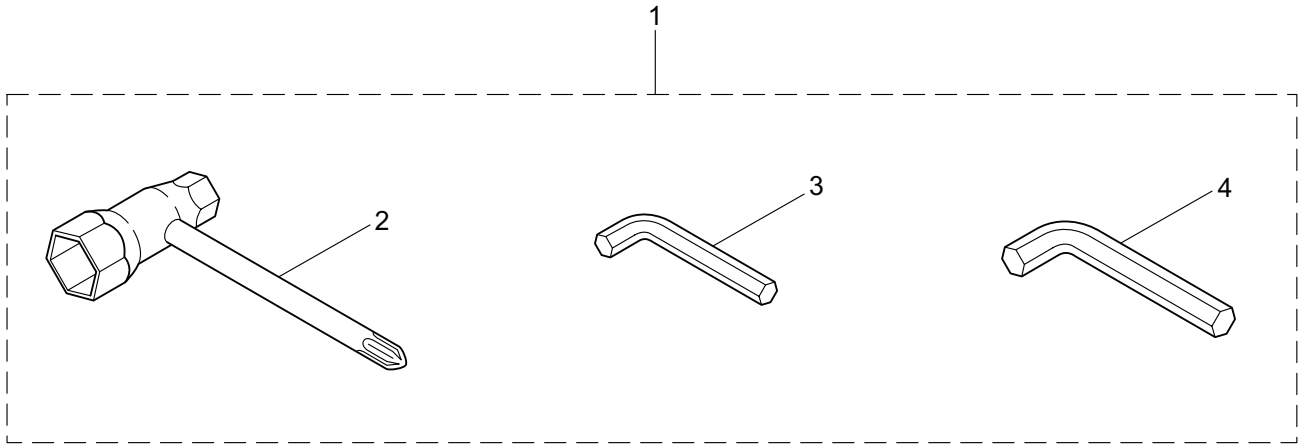


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	264606	Tool Set	1	Incl.2-4
2-2	264607	Box Spanner	1	10x19x(+)
2-3	219431	Wrench	1	3mm
2-4	219432	Wrench	1	4mm
2-5	270490	Instruction Manual	1	
2-6	522109	Parts List	1	HT230DL

3. HT230DL ENGINE

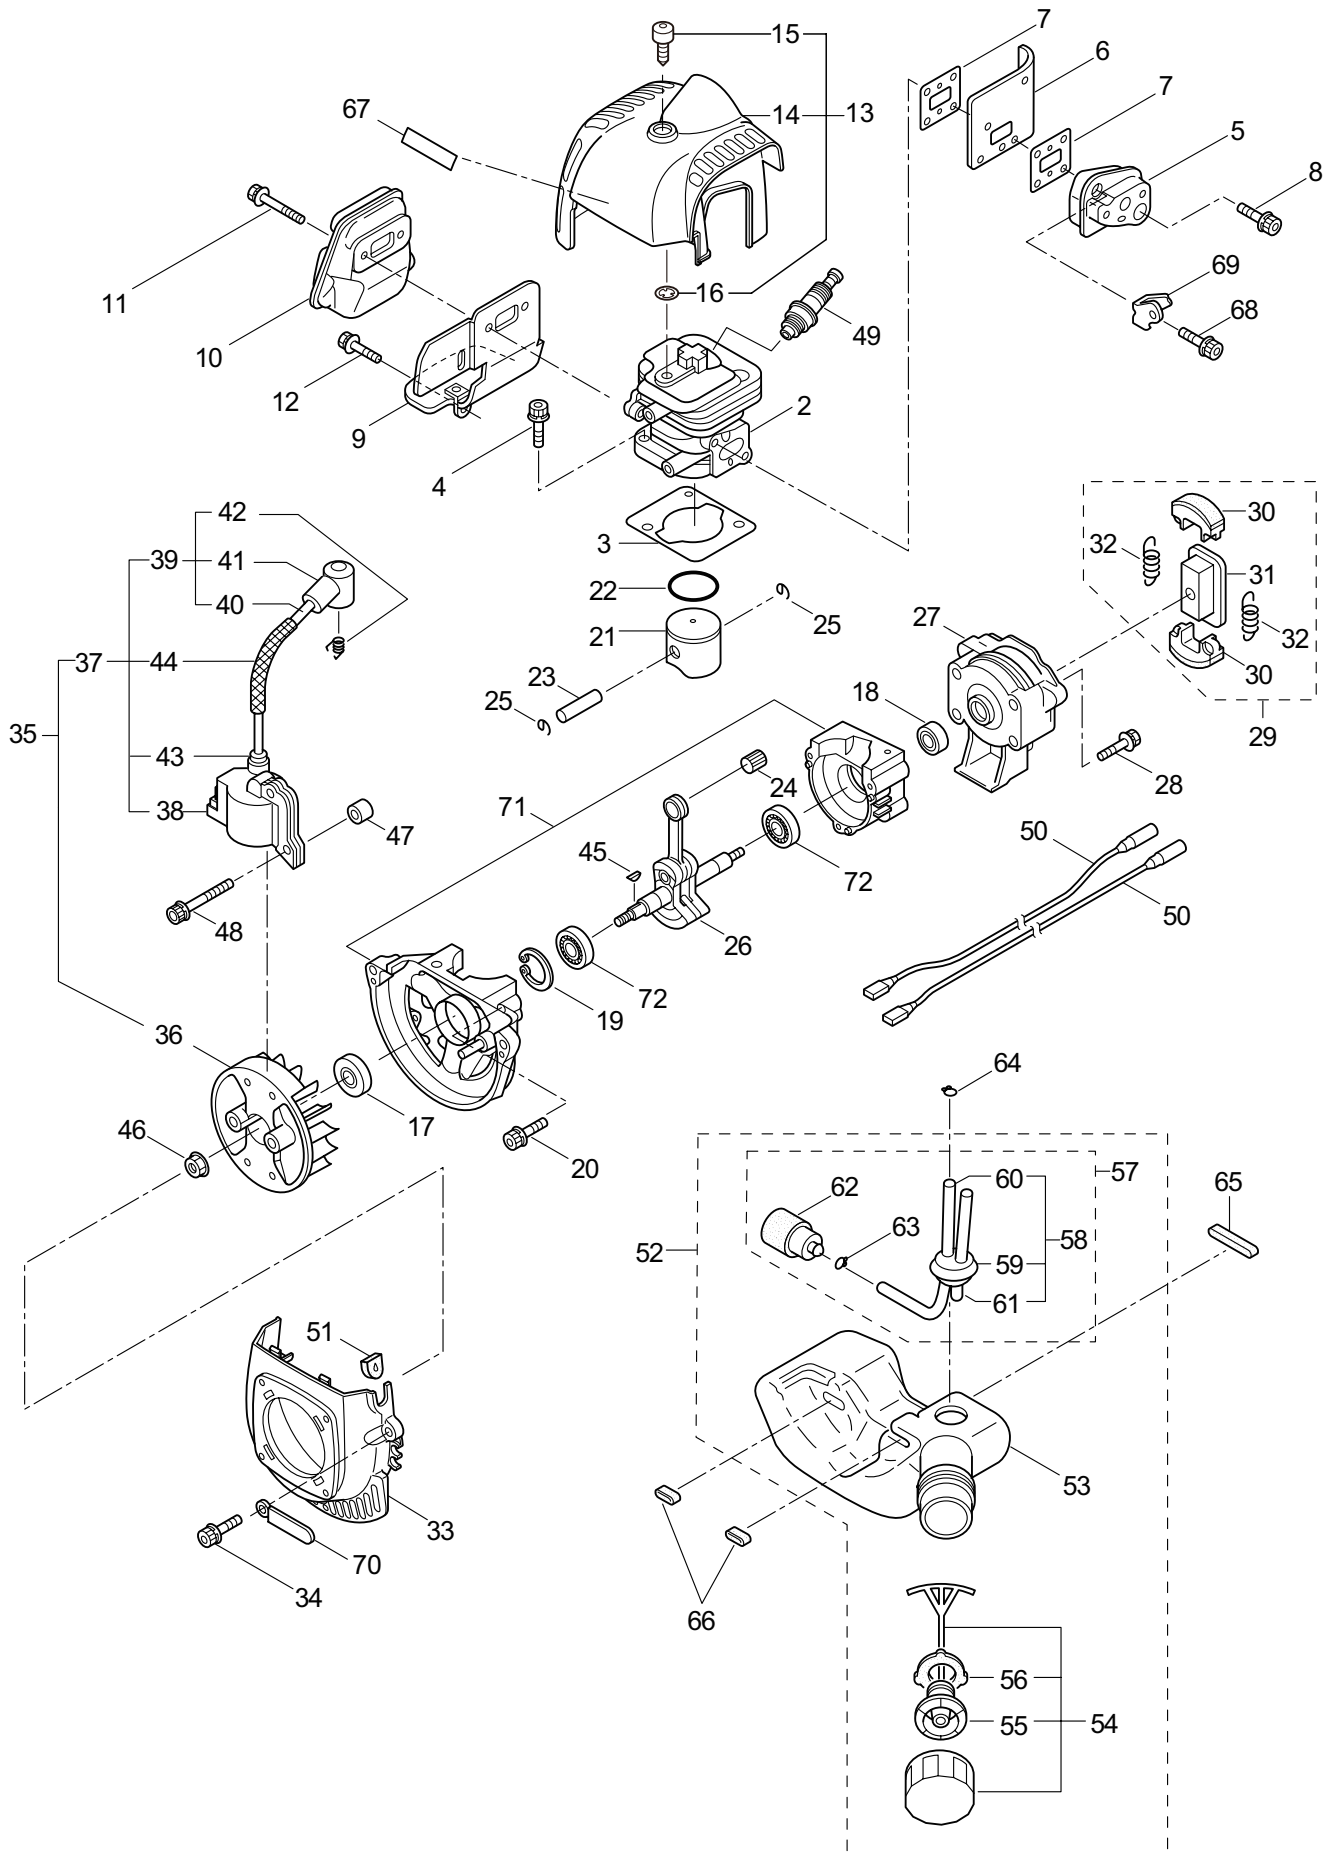


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	858049	Engine	1	LE230/152
3-2	264981	Cylinder	1	New gasket required
3-3	263770	Gasket	1	
3-4	267290	Cap Screw	2	M5x20
3-5	267924	Insulator	1	New gasket required
3-6	265794	Air Duct	1	
3-7	261171	Gasket	2	
3-8	268563	Cap Screw	1	M5x25
3-9	280772	Gasket Comp.	1	
3-10	280571	Muffler	1	
3-11	264223	Cap Screw	2	M5x40
3-12	261607	Cap Screw	1	M5x16
3-13	286408	Top Cover Ass'y	1	Incl.14-16
3-14	280747	Top Cover	1	
3-15	286399	Knob	1	M5
3-16	286270	Washer	1	M5
3-17	262712	Oil Seal	1	TC10267
3-18	262713	Oil Seal	1	TC10207
3-19	054676	Snap Ring	1	#26
3-20	261246	Cap Screw	3	M5x25
3-21	283265	Piston	1	
3-22	263789	Piston Ring	1	
3-23	281185	Piston Pin	1	
3-24	261037	Bearing,Needle	1	KBK8x11x11.8x1
3-25	261576	Clip,Piston	2	
3-26	264643	Shaft Comp	1	
3-27	264585	Clutch Case	1	
3-28	261607	Cap Screw	4	M5x16
3-29	280404	Clutch Ass'y	1	Incl.30-32
3-30	280568	Clutch Shoe	2	(2)required
3-31	280569	Clutch Boss	1	
3-32	280570	Spring	2	(2)required
3-33	280748	Fan Cover	1	
3-34	261250	Cap Screw	3	M5x20
3-35	282509	Magneto Ass'y	1	Incl.36-44
3-36	263570	Rotor/Fan	1	
3-37	263572	Ignition Coil Ass'y	1	Incl.38-44
3-38	263571	Coil	1	
3-39	261744	Spark Plug Wire Ass'y	1	Incl.40-42
3-40	261071	Spark Plug Wire	1	
3-41	261074	Plug Boot	1	
3-42	261075	Connector	1	
3-43	261072	Cap	1	
3-44	261073	Insulator	1	6x6.8x80
3-45	261076	Woodruff Key	1	3x10

3. HT230DL ENGINE

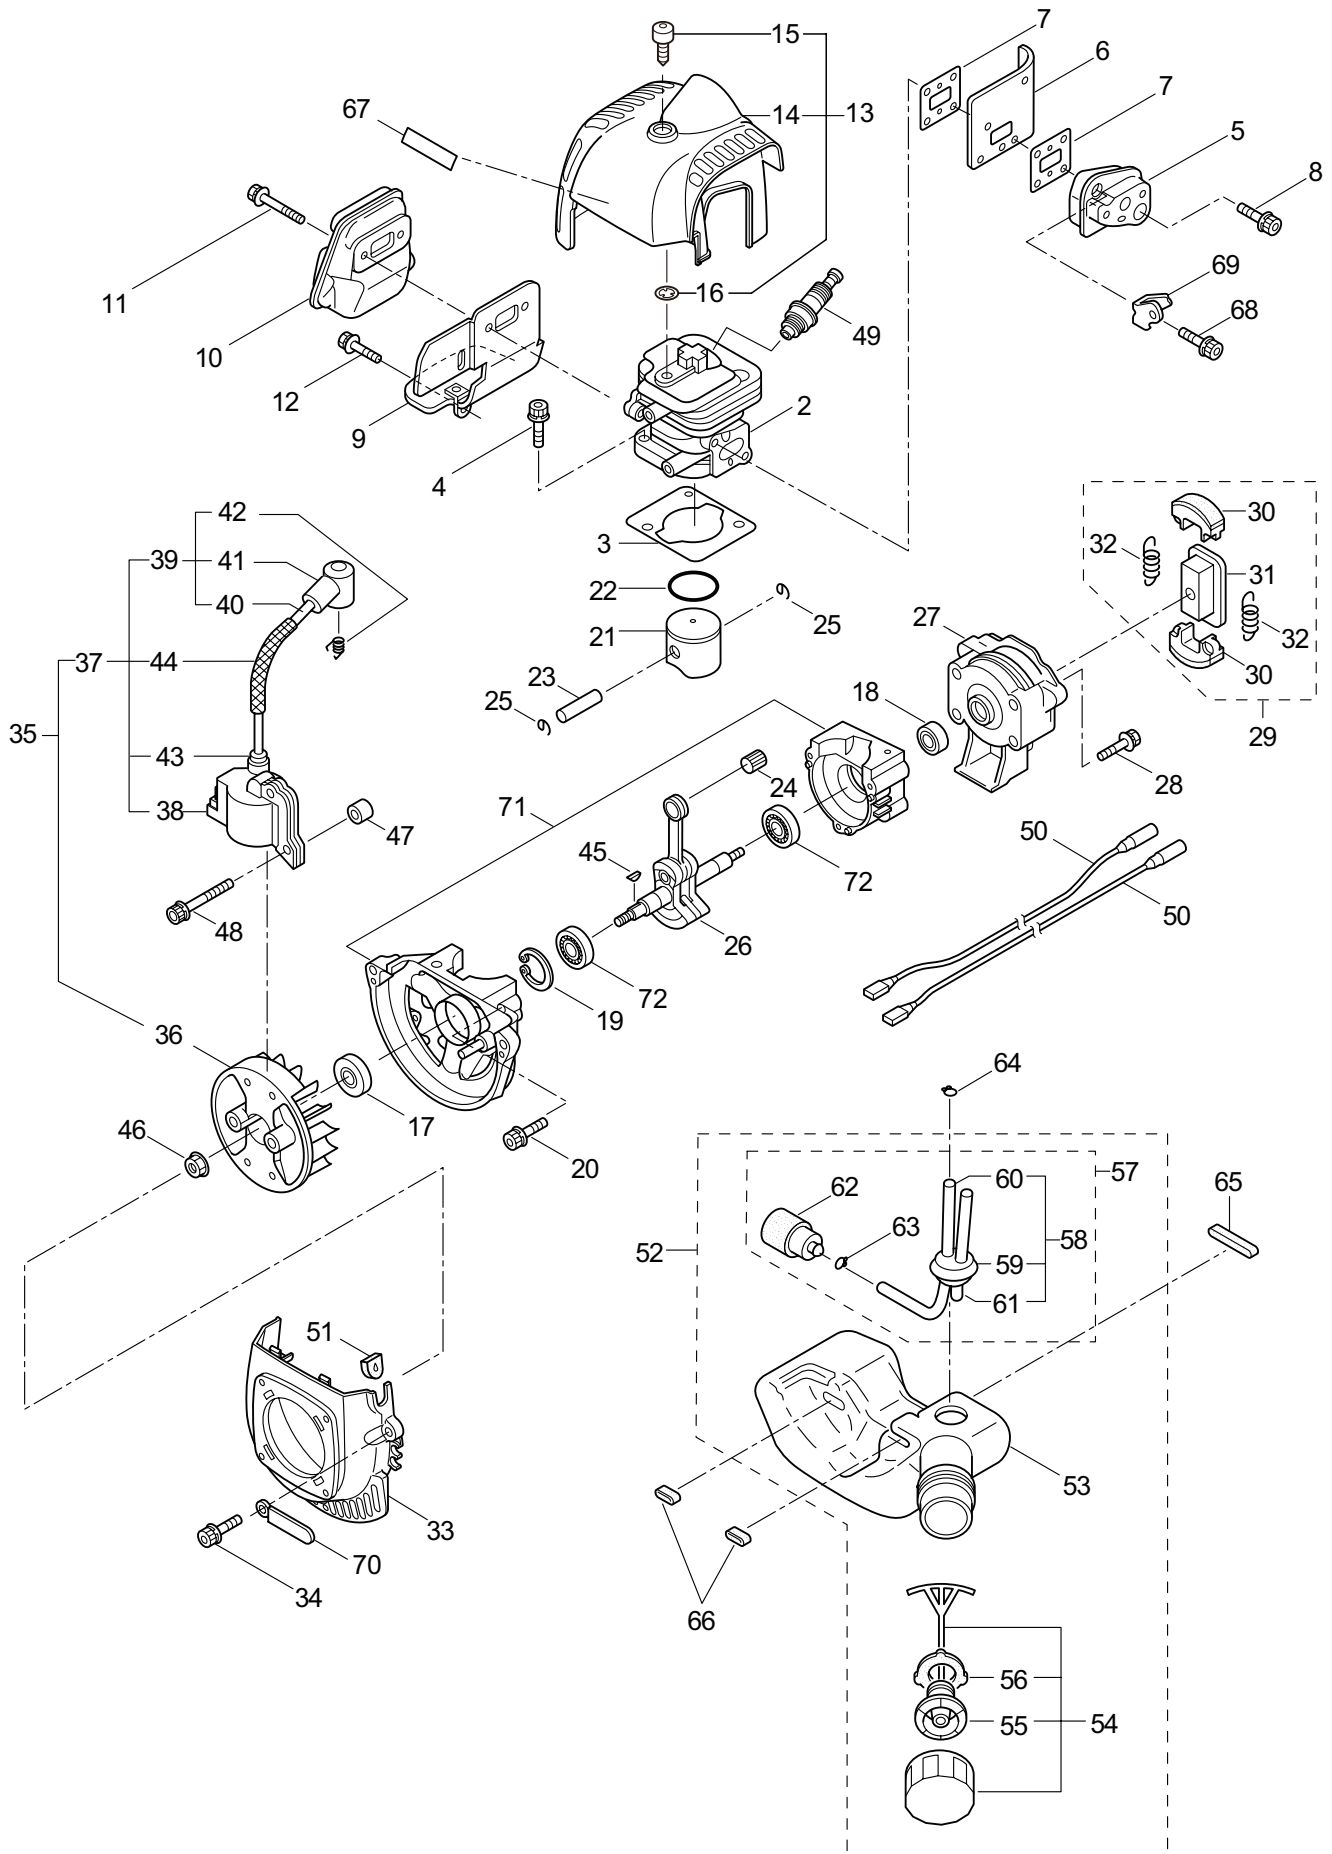

Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	261077	Nut,Rotor	1	M6
3-47	280381	Spacer	2	
3-48	261256	Cap Screw	2	M4x25
3-49	262483	Spark Plug	1	NGK BP6MR6Y
3-50	261772	Lead	2	
3-51	261202	Grommet	1	
3-52	265175	Fuel Tank Ass'y	1	Incl.53-63
3-53	264545	Fuel Tank	1	
3-54	265176	Tank Cap Ass'y	1	Incl.55,56
3-55	269415	Breather Ass'y	1	
3-56	269417	Gasket	1	
3-57	265928	Fuel Pipe Pick-up Ass'y	1	Incl.58-63
3-58	265929	Fuel Pipe Ass'y	1	Incl.59-61
3-59	265869	Grommet	1	
3-60	262649	Fuel Pipe	1	
3-61	263038	Return Pipe	1	3x6x85L
3-62	264653	Filter Ass'y	1	
3-63	261117	Clip	1	
3-64	261117	Clip	1	
3-65	263824	Pad	1	
3-66	264318	Pad	2	
3-67	266959	Label	1	Caution
3-68	282510	Screw	1	M5x18
3-69	282756	Stay	1	
3-70	264588	Clamp	1	
3-71	264542	Crankcase	1	
3-72	261181	Bearing	2	#6000C3

4. HT230DL
 CARBURETOR, RECOIL STARTER

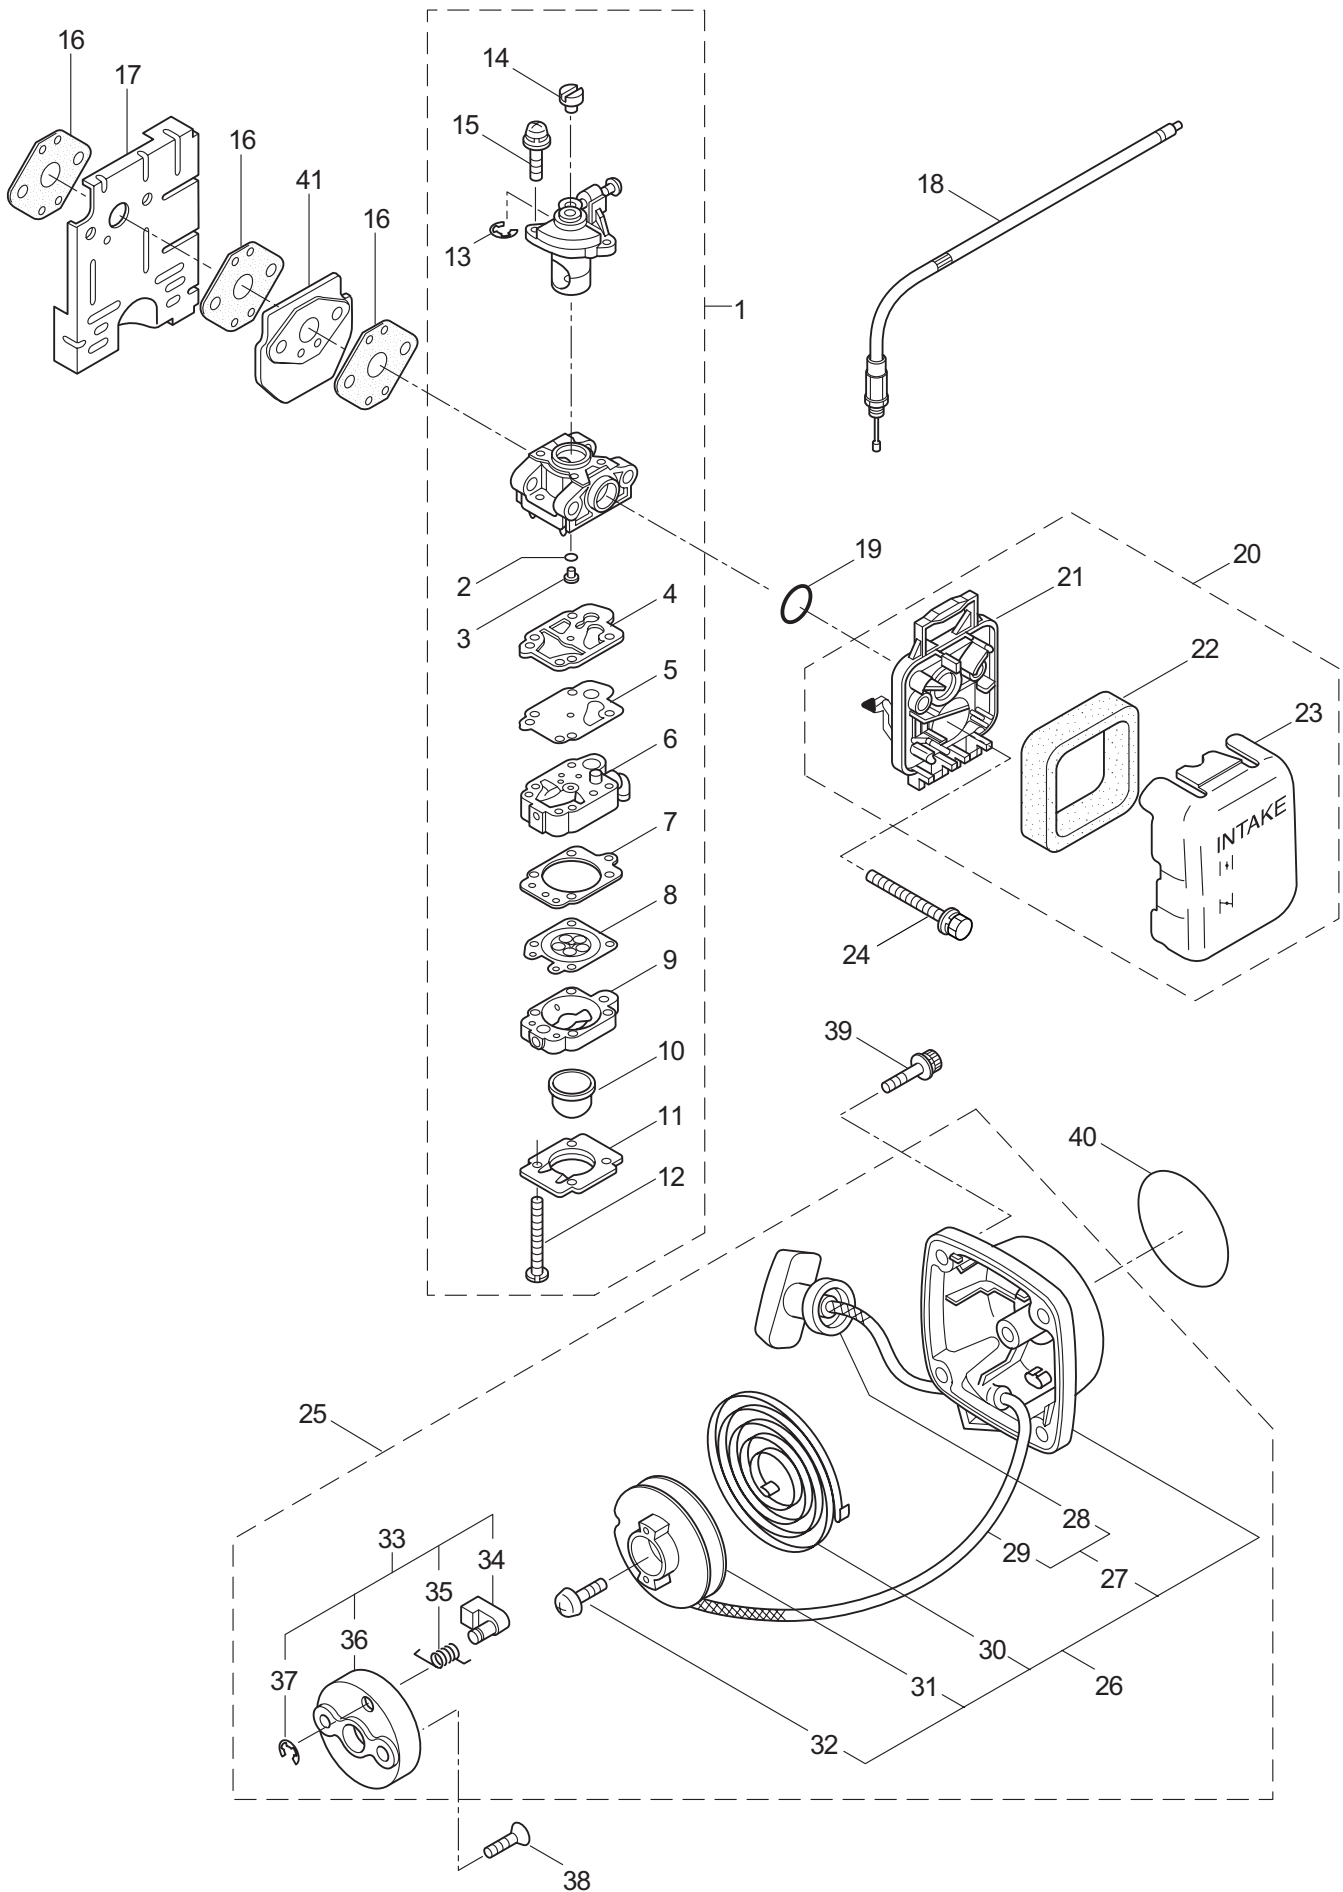

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	266287	Carburetor Ass'y	1	Incl.2-15 New Gasket required
4-2	261871	O-Ring	1	
4-3	289621	Main Jet	1	
4-4	282576	Gasket	1	
4-5	262994	Diaphragm,Fuel Pump	1	
4-6	268499	Pump Body	1	
4-7	262993	Gasket	1	
4-8	283905	Diaphragm, Meterring	1	
4-9	262991	Purge Body	1	
4-10	261874	Primer Bulb	1	
4-11	262992	Cover Plate	1	
4-12	262996	Screw	4	
4-13	261876	E-Ring	1	
4-14	261658	Swivel	1	
4-15	264682	Screw	2	
4-16	261864	Gasket	3	
4-17	265973	Baffle Plate	1	
4-18	283963	Cable Comp	1	
4-19	264691	O-Ring	1	
4-20	265575	Cleaner Ass'y	1	Incl.21-23
4-21	265576	Housing	1	
4-22	264695	Filter	1	
4-23	264709	Cover	1	
4-24	283377	Screw	2	M5x70
4-25	264534	Recoil Starter Ass'y	1	Incl.26-37
4-26	264083	Starter Ass'y	1	Incl.27-32
4-27	115096	Rope Ass'y	1	Incl.28,29
4-28	261725	Starter Grip	1	
4-29	261627	Starter Rope	1	
4-30	261622	Spiral Spring	1	
4-31	261621	Pulley	1	
4-32	262922	Screw	1	
4-33	264085	Starter Pawl Ass'y	1	Incl.34-37
4-34	261630	Pawl	1	
4-35	261631	Return Spring	1	
4-36	264086	Pawl Case	1	
4-37	020299	E-Ring	1	#4
4-38	264535	Screw	2	M6x20
4-39	286993	Cap Screw	4	M5x16
4-40	265740	Label	1	HT230DL
4-41	269981	Divider	1	