

# PARTS LIST

BC5021H-RS(EU01)

BC5021H-RS(1P)

## CONTENTS


1. MAIN BODY .....	1 ~ 2
2. GEARCASE.....	3 ~ 4
3. ENGINE.....	5 ~ 8
4. CARBURETOR, FUEL TANK .....	9 ~ 12
5. ACCESSORIES .....	13 ~ 14

2019. 03.




P/N 524758

1. BC5021H-RS(EU01)/BC5021H-RS(1P)  
MAIN BODY

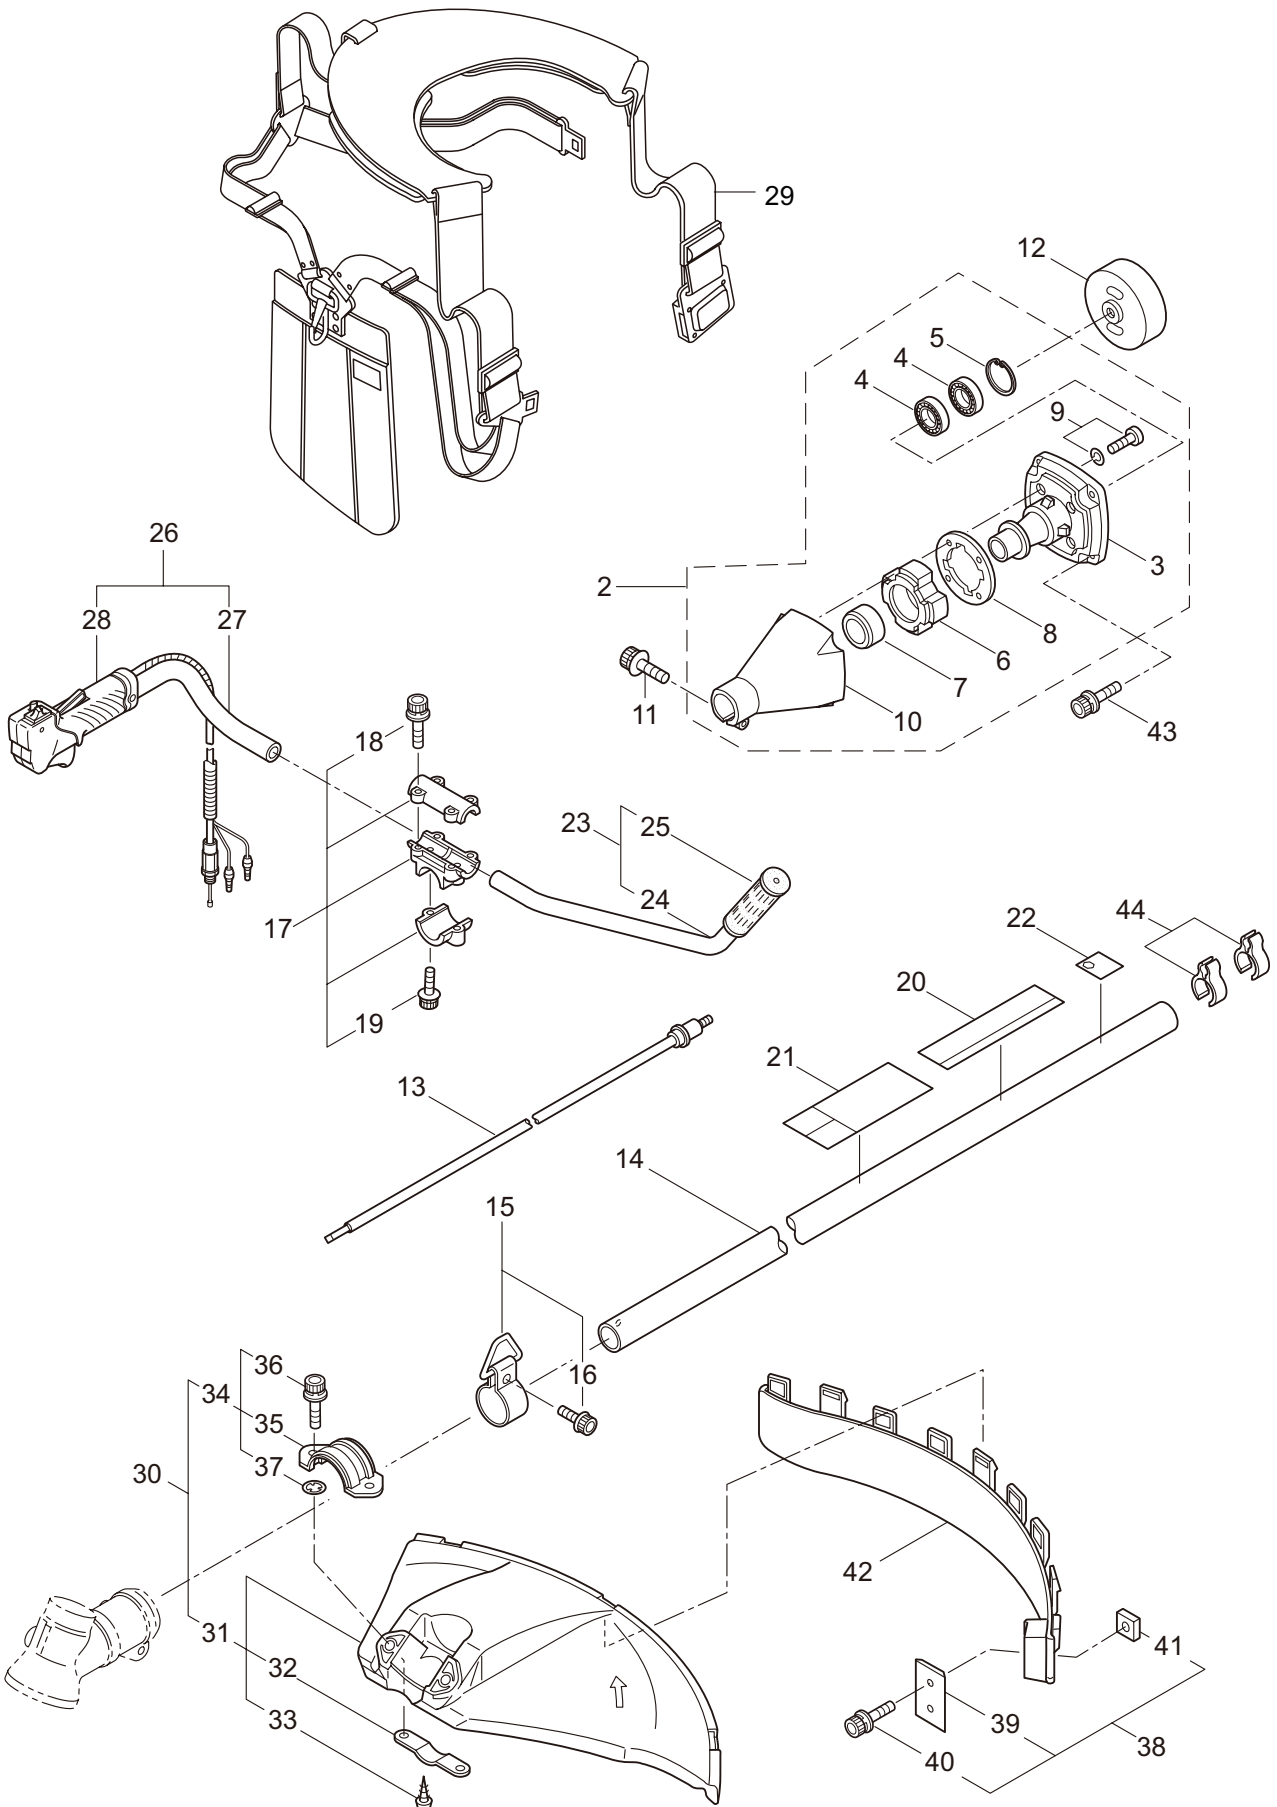


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	364791	BC5021H-RS(EU01)	1	
1-1	364795	BC5021H-RS(1P)	1	
1-2	234162	Clutch Case Ass'y	1	Incl.3-10
1-3	234143	Bearing Case	1	
1-4	140474	Bearing	2	#6202ZZ
1-5	012380	Snap Ring	1	#35
1-6	217045	Buffer (A)	1	
1-7	217046	Buffer (B)	1	
1-8	217047	Washer	1	
1-9	092033	Screw	4	M5x15
1-10	227728	Driveshaft Tube Adapter	1	
1-11	217134	Bolt	1	M6x30
1-12	211203	Clutch Drum	1	
1-13	217897	Driveshaft Ass'y	1	
1-14	217900	Driveshaft Tube	1	
1-15	231887	Hanging Bracket Ass'y	1	Incl.16
1-16	261762	Cap Screw	1	M5x14
1-17	231888	Bracket Ass'y	1	Incl.18,19
1-18	217138	Bolt	4	M6x25
1-19	217134	Bolt	2	M6x30
1-20	241697	Label	1	BC5021H-RS
1-21	223188	Label	1	
1-22	225379	Label	1	117dBA
1-23	228398	Handle Ass'y-Left	1	Incl.24,25
1-24	228399	Handle (A)	1	
1-25	226512	Grip	1	
1-26	229762	Handle Ass'y-Right	1	Incl.27,28
1-27	228401	Handle (B)	1	
1-28	229763	Throttle Trigger	1	
1-29	228086	Hanging Strap Ass'y	1	
1-30	232092	Safety Cover Ass'y	1	Incl.31-37
1-31	231262	Safety Cover Ass'y	1	Incl.32,33
1-32	237364	Threaded Bracket	1	
1-33	221580	Screw	1	4x8
1-34	232093	Bracket Ass'y	1	Incl.35-37
1-35	223179	Bracket	1	
1-36	220632	Cap Screw	2	M6x30
1-37	231704	Washer	2	6x13xt1.0
1-38	231882	String Cutter Ass'y	1	Incl.39-41
1-39	230747	String Cutter	1	
1-40	261250	Cap Screw	1	M5x20
1-41	228325	Nut	1	
1-42	230748	Cover Extention	1	
1-43	219113	Cap Screw	4	M6x20
1-44	219161	Wire Guide	2	

2. BC5021H-RS(EU01)/BC5021H-RS(1P)  
GEARCASE

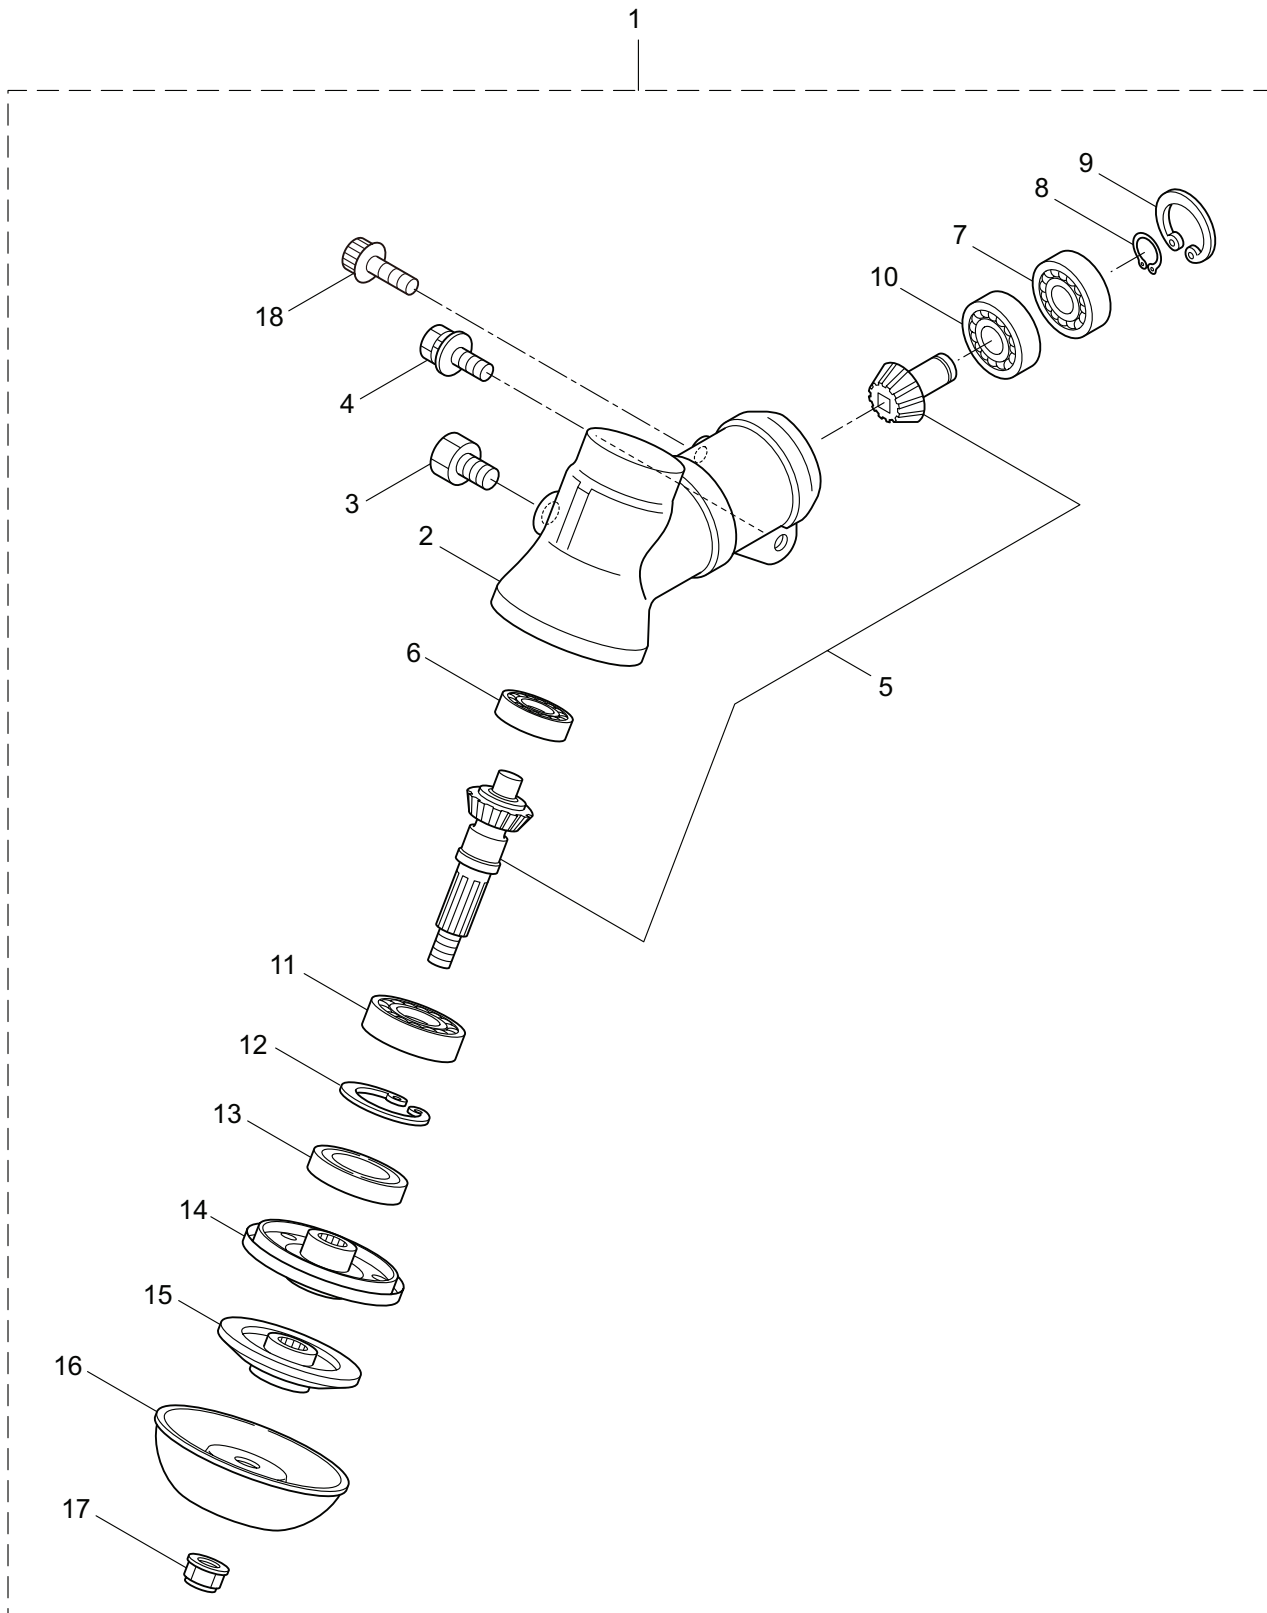


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	234835	Gearcase Ass'y	1	Incl.2-18
2-2	232833	Gearcase	1	
2-3	234109	Bolt	1	M8x8
2-4	217134	Bolt	1	M6x30
2-5	234349	Gear Set	1	
2-6	014490	Bearing	1	#6000
2-7	106933	Bearing	1	#6000Z
2-8	014210	Snap Ring	1	#10
2-9	054676	Snap Ring	1	#26
2-10	014490	Bearing	1	#6000
2-11	012544	Bearing	1	#6202
2-12	012380	Snap Ring	1	#35
2-13	232049	Oil Seal	1	D21355
2-14	232322	Bracket A Ass'y	1	
2-15	232052	Bracket B	1	
2-16	230849	Stabilizer	1	
2-17	232920	Nut	1	M10x1.25
2-18	217135	Bolt	1	M6x10

### 3. BC5021H-RS(EU01)/BC5021H-RS(1P) ENGINE

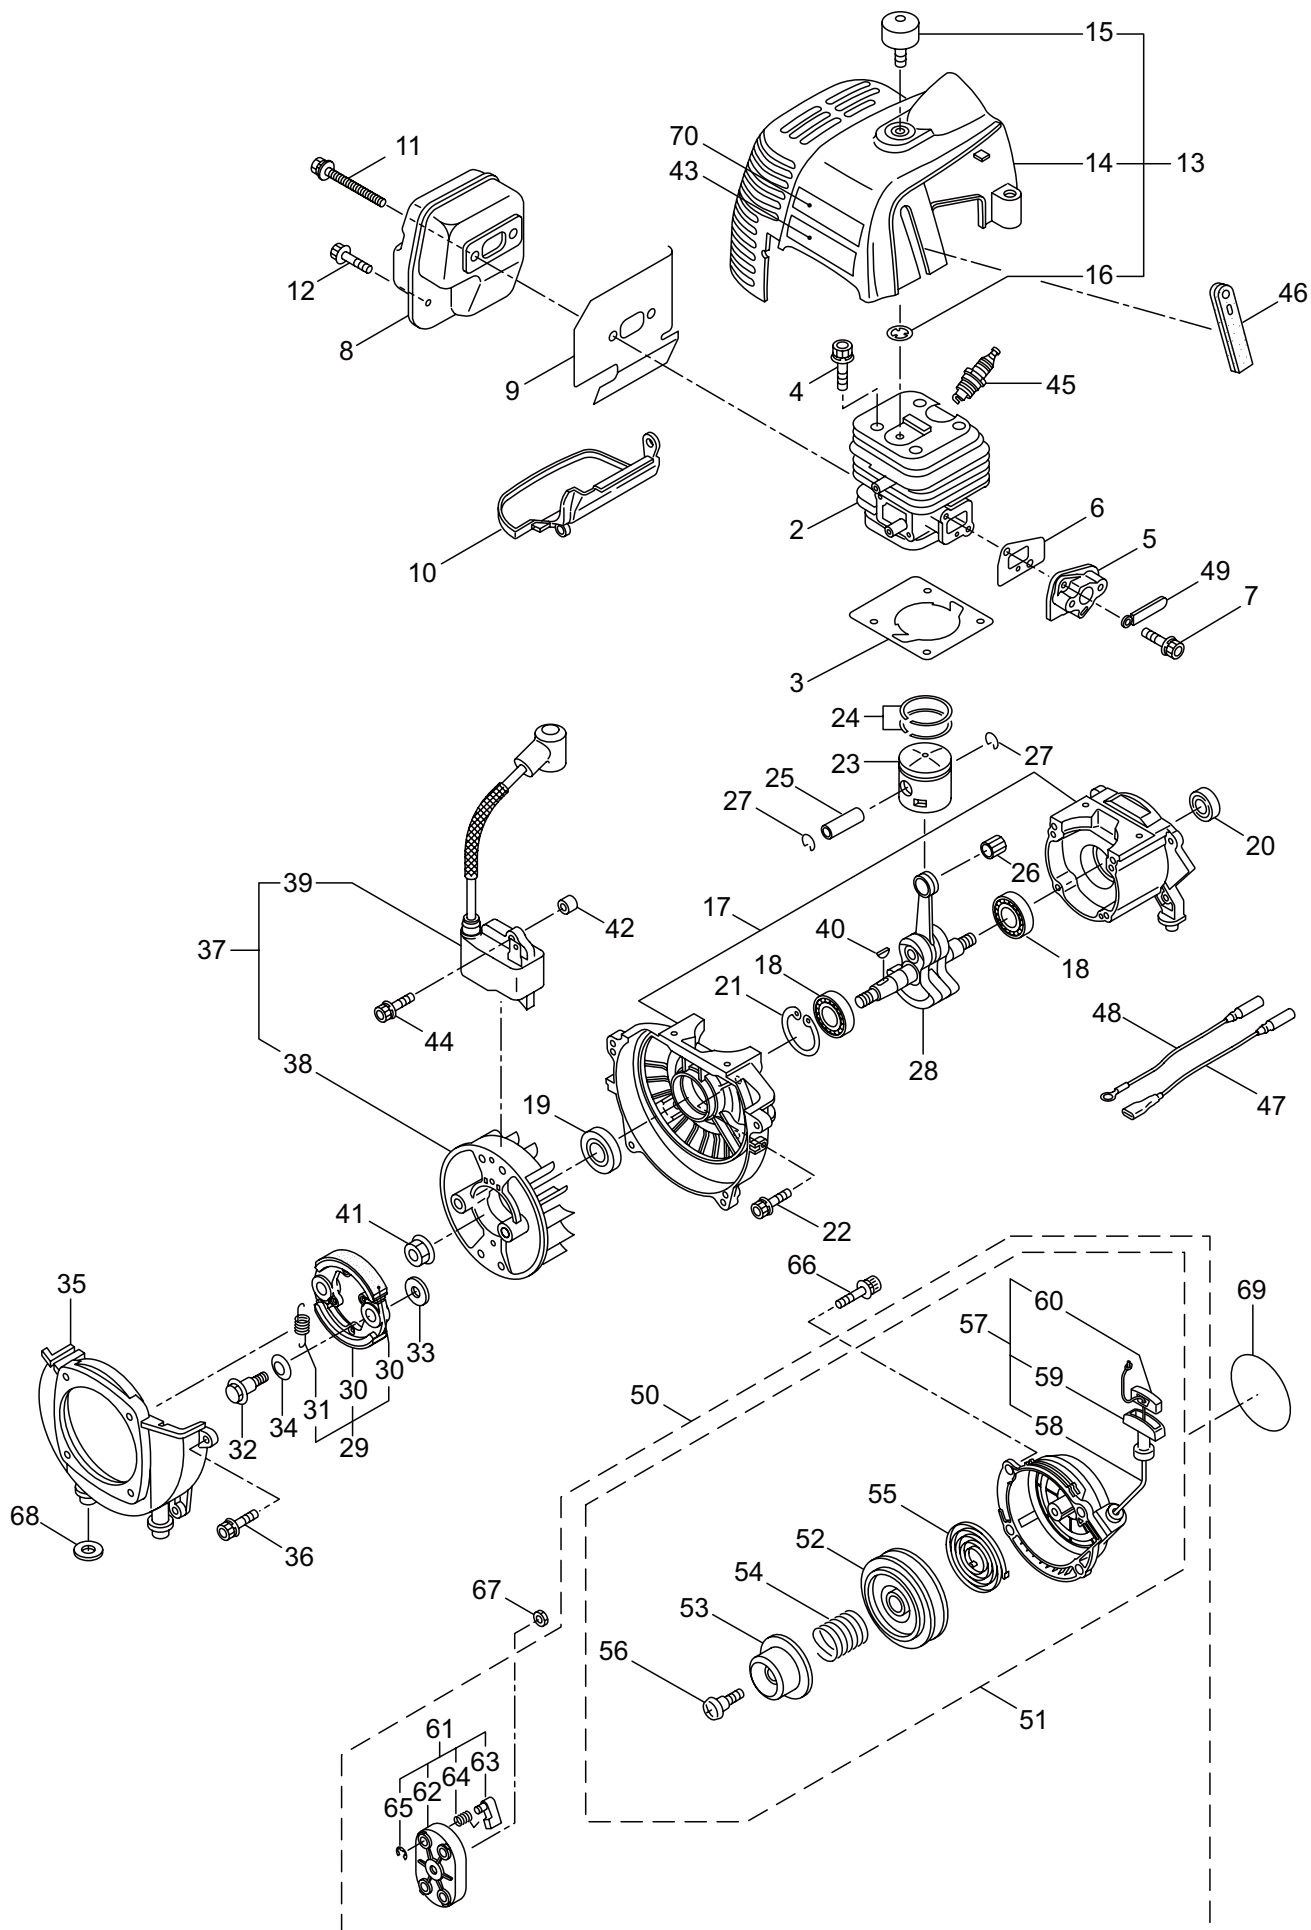

Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	875278	Engine	1	CE500/01
3-2	288125	Cylinder	1	
3-3	288171	Gasket	1	
3-4	261246	Cap Screw	4	M5x25
3-5	285778	Insulator	1	New gasket required
3-6	285779	Gasket	1	
3-7	265924	Cap Screw	2	M5x25
3-8	288276	Muffler Comp	1	
3-9	285783	Gasket	1	
3-10	285784	Under Cover	1	
3-11	266713	Cap Screw	2	M5x60
3-12	283315	Screw	1	M5x12W-12
3-13	286891	Top Cover Ass'y	1	Incl.14-16
3-14	285786	Top Cover	1	
3-15	285843	Knob	1	
3-16	286362	Washer	1	M6
3-17	288200	Crankcase	1	
3-18	262658	Bearing	2	#6202C3
3-19	262660	Oil Seal	1	TC15357
3-20	262565	Oil Seal	1	ISCD15257
3-21	012380	Snap Ring	1	#35
3-22	261612	Cap Screw	4	M5x30
3-23	246091	Piston	1	
3-24	282941	Piston Ring	2	(2)Required
3-25	262749	Piston Pin	1	
3-26	262659	Bearing,Needle	1	KTV111414EG01B2
3-27	262479	Clip,Piston Pin	2	
3-28	285797	Crankshaft/Conn.Rod Ass'y	1	
3-29	286905	Clutch Ass'y	1	Incl.30,31
3-30	286906	Clutch Shoe	2	(2)Required
3-31	286907	Spring, Clutch	1	
3-32	287092	Cap Screw	2	M8x1.25
3-33	262683	Washer	2	8x22xt1.2
3-34	262682	Wave Washer	2	
3-35	282285	Fan Cover	1	
3-36	261250	Cap Screw	4	M5x20
3-37	246097	Magneto Ass'y	1	Incl.38,39
3-38	246074	Rotor/Fan	1	
3-39	279547	Ignition Coil Ass'y	1	
3-40	261076	Woodruff Key	1	3x10
3-41	262731	Nut,Rotor	1	M10
3-42	280381	Spacer	2	
3-43	246302	Label	1	MARUYAMA
3-44	261256	Cap Screw	2	M4x25
3-45	288264	Spark Plug	1	BPMR8Y


3. BC5021H-RS(EU01)/BC5021H-RS(1P)  
ENGINE

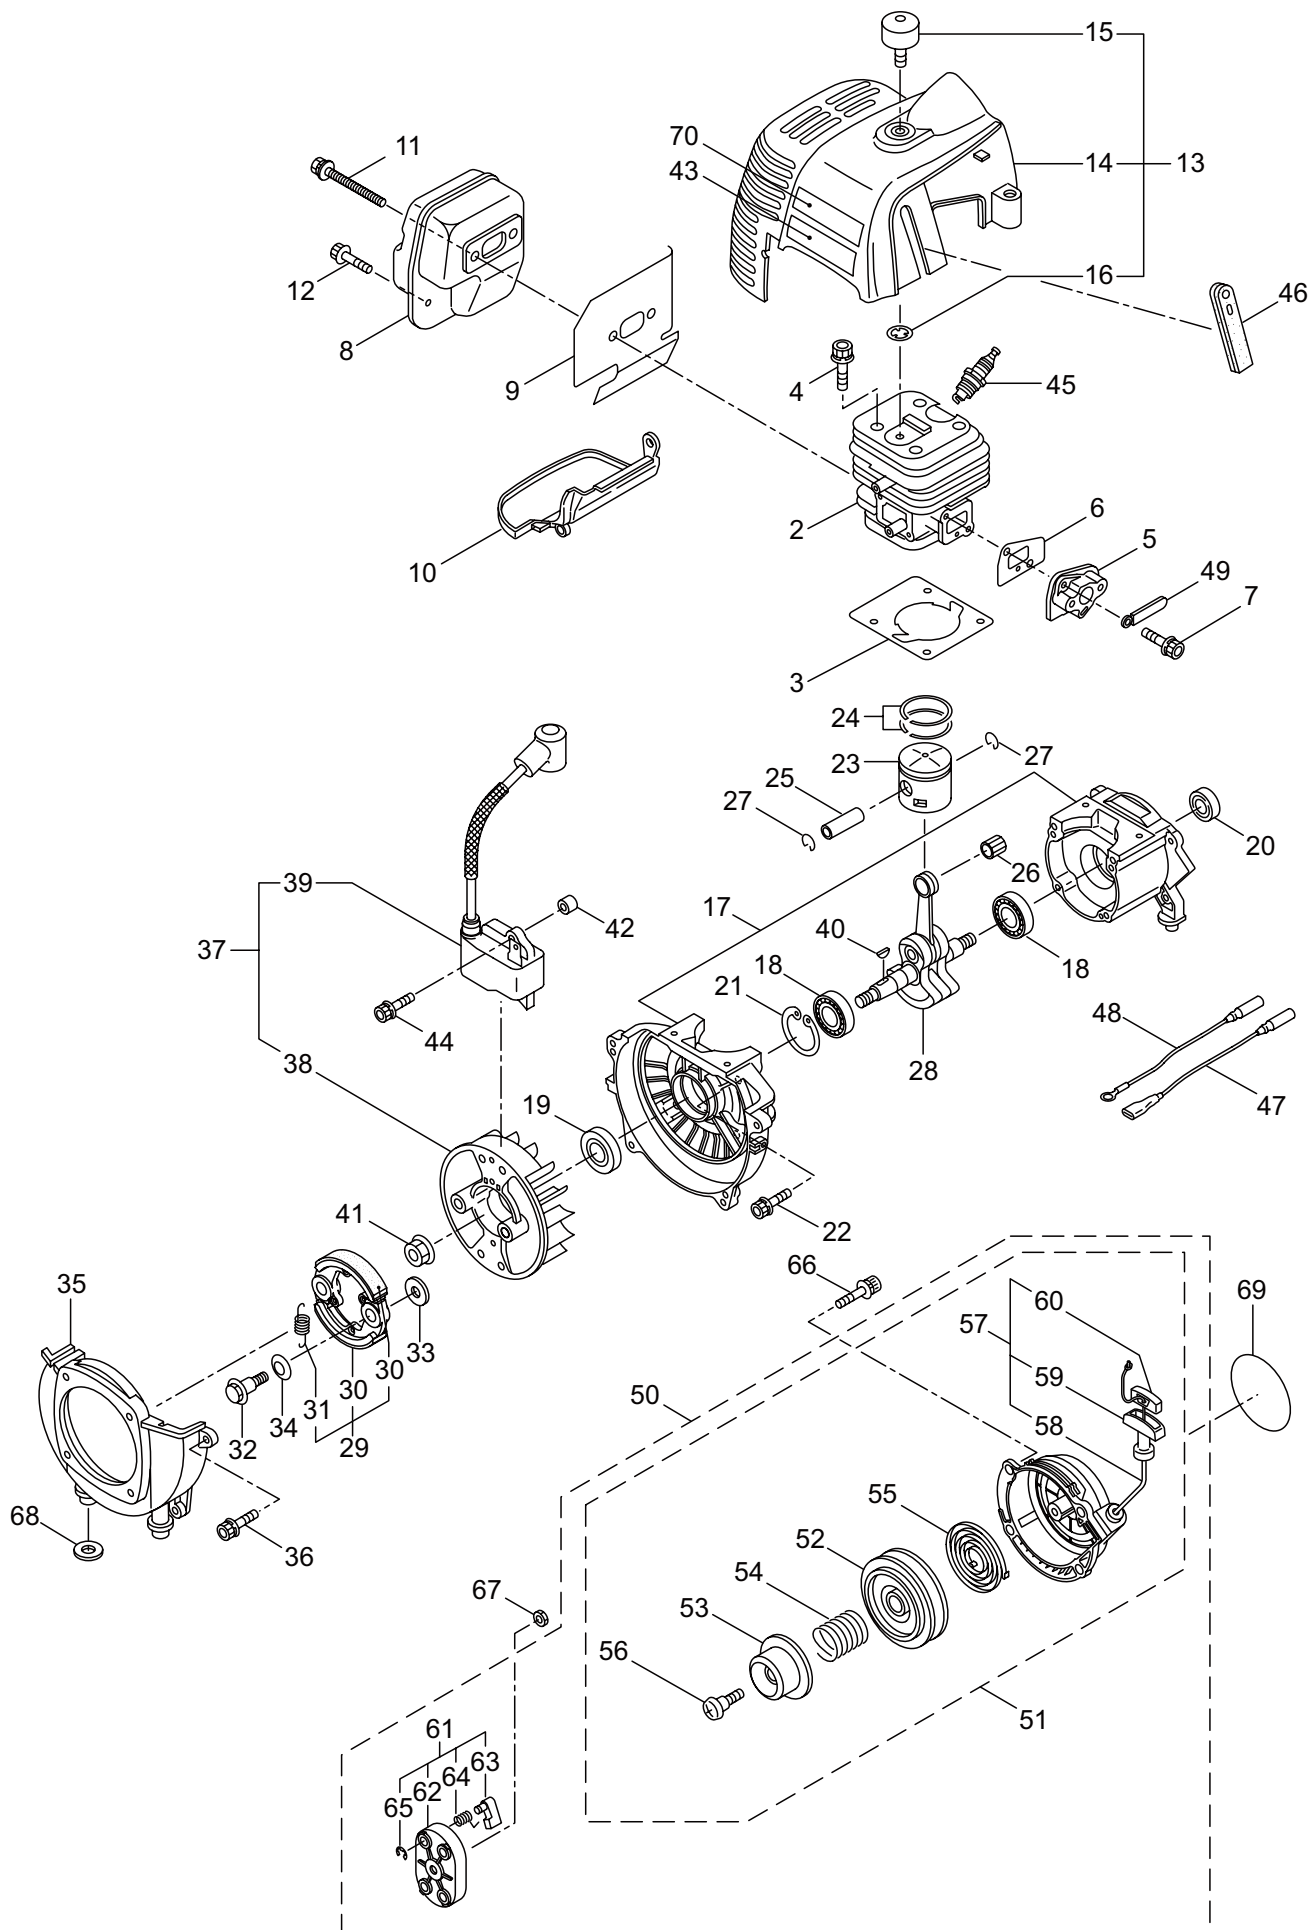




Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	286988	Grommet	1	
3-47	283735	Wire, Coil	1	
3-48	284541	Wire,Lead	1	
3-49	264588	Clamp	1	
3-50	285809	Recoil Starter Ass'y	1	Incl.51-65
3-51	285810	Starter Ass'y	1	Incl.52-60
3-52	286291	Reel	1	
3-53	286292	Cam Plate	1	
3-54	286293	Damper Spring	1	
3-55	280995	Spiral Spring	1	
3-56	286295	Set Screw	1	
3-57	286296	Starter Rope Ass'y	1	Incl.58-60
3-58	286297	Starter Rope	1	3.8x1000
3-59	262633	Starter Grip	1	
3-60	262981	Cap	1	
3-61	285679	Starter Pulley Ass'y	1	Incl.62-65
3-62	285680	Starter Pulley	1	
3-63	285681	Pawl	2	
3-64	285682	Return Spring	2	
3-65	262638	E-Ring	2	
3-66	268940	Screw	4	M5x18
3-67	285736	Nut	1	M8
3-68	285735	Packing	4	
3-69	246090	Label	1	
3-70	265694	Label	1	

4. BC5021H-RS(EU01)/BC5021H-RS(1P)  
 CARBURETOR, FUEL TANK

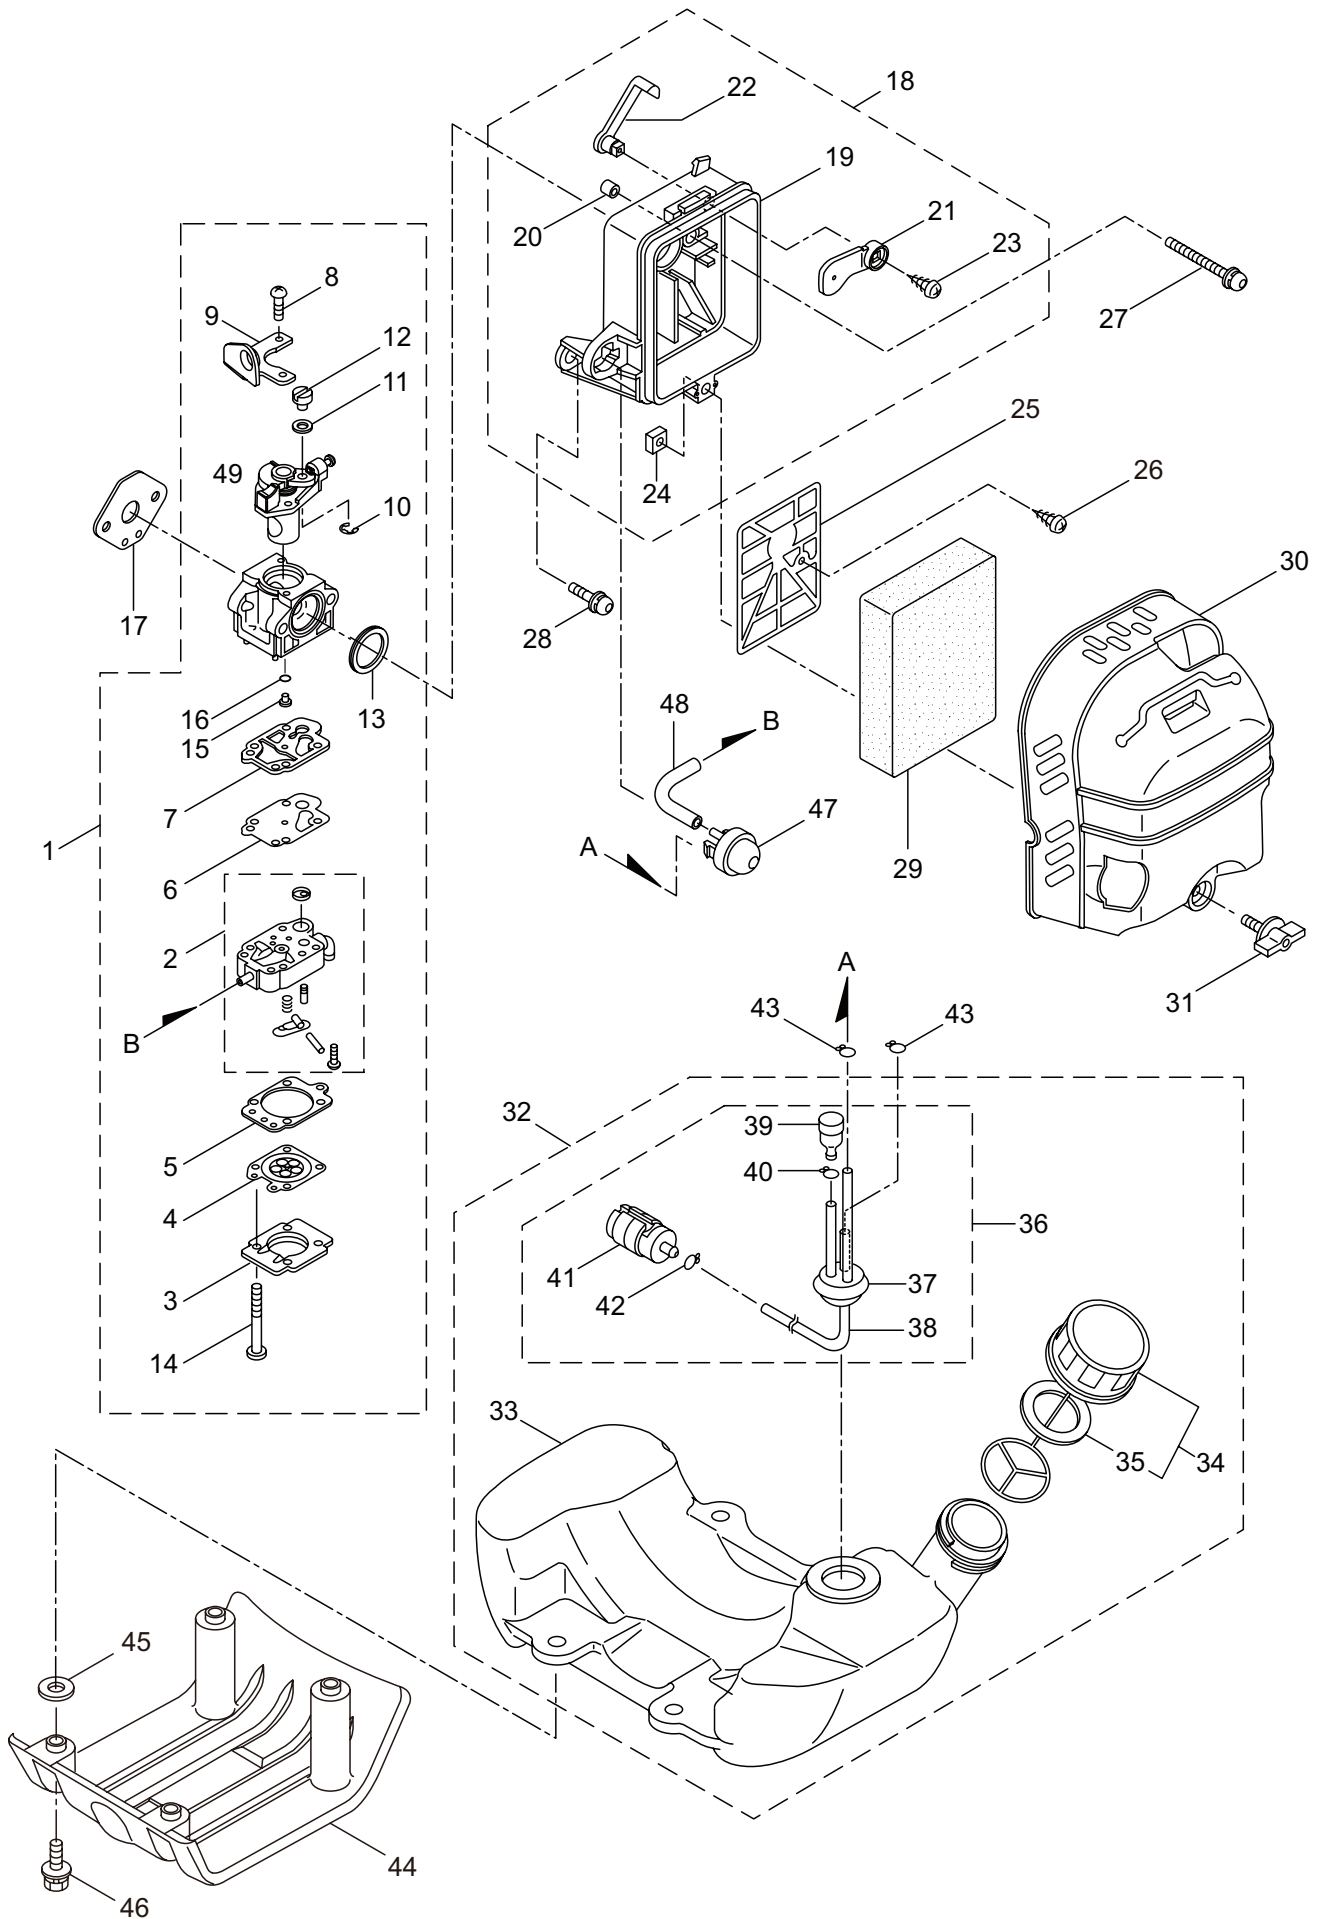














Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	289479	Carburetor Ass'y	1	Incl.2-16
4-2	283124	Pump Body	1	
4-3	263726	Cover Plate	1	
4-4	283905	Diaphragm, Meterring	1	
4-5	263727	Gasket	1	
4-6	262994	Diaphragm,Fuel Pump	1	
4-7	282576	Gasket	1	
4-8	261875	Screw	2	
4-9	264677	Bracket	1	
4-10	261876	E-Ring	1	
4-11	264678	Washer	1	
4-12	261658	Swivel	1	
4-13	261657	Packing	1	
4-14	263737	Screw	4	
4-15	246486	Main Jet	1	
4-16	261871	O-Ring	1	
4-17	282301	Gasket	1	
4-18	282302	Case Ass'y	1	Incl.19-24
4-19	282303	Case Body	1	
4-20	282484	Sleeve	3	
4-21	282304	Valve	1	
4-22	282305	Lever	1	
4-23	269032	Screw	1	
4-24	269423	Nut	1	
4-25	282481	Plate	1	
4-26	269032	Screw	1	
4-27	261814	Cap Screw	2	M5x50
4-28	264807	Cap Screw	1	M5x16
4-29	282306	Element	1	
4-30	285814	Cleaner Cover	1	
4-31	279350	Knob	1	
4-32	286893	Fuel Tank Ass'y	1	Incl.33-42
4-33	286067	Fuel Tank	1	
4-34	275306	Fuel Tank Cap Ass'y	1	Incl.35
4-35	274875	Gasket	1	
4-36	286794	Fuel Pipe Pick-up Ass'y	1	Incl.37-42
4-37	268065	Grommet	1	
4-38	262649	Fuel Pipe	1	
4-39	261590	Breather	1	
4-40	261117	Clip	1	
4-41	267328	Fuel Filter Ass'y	1	
4-42	261117	Clip	1	
4-43	261117	Clip	2	
4-44	285819	Stand	1	
4-45	285735	Packing	4	

4. BC5021H-RS(EU01)/BC5021H-RS(1P)  
 CARBURETOR, FUEL TANK

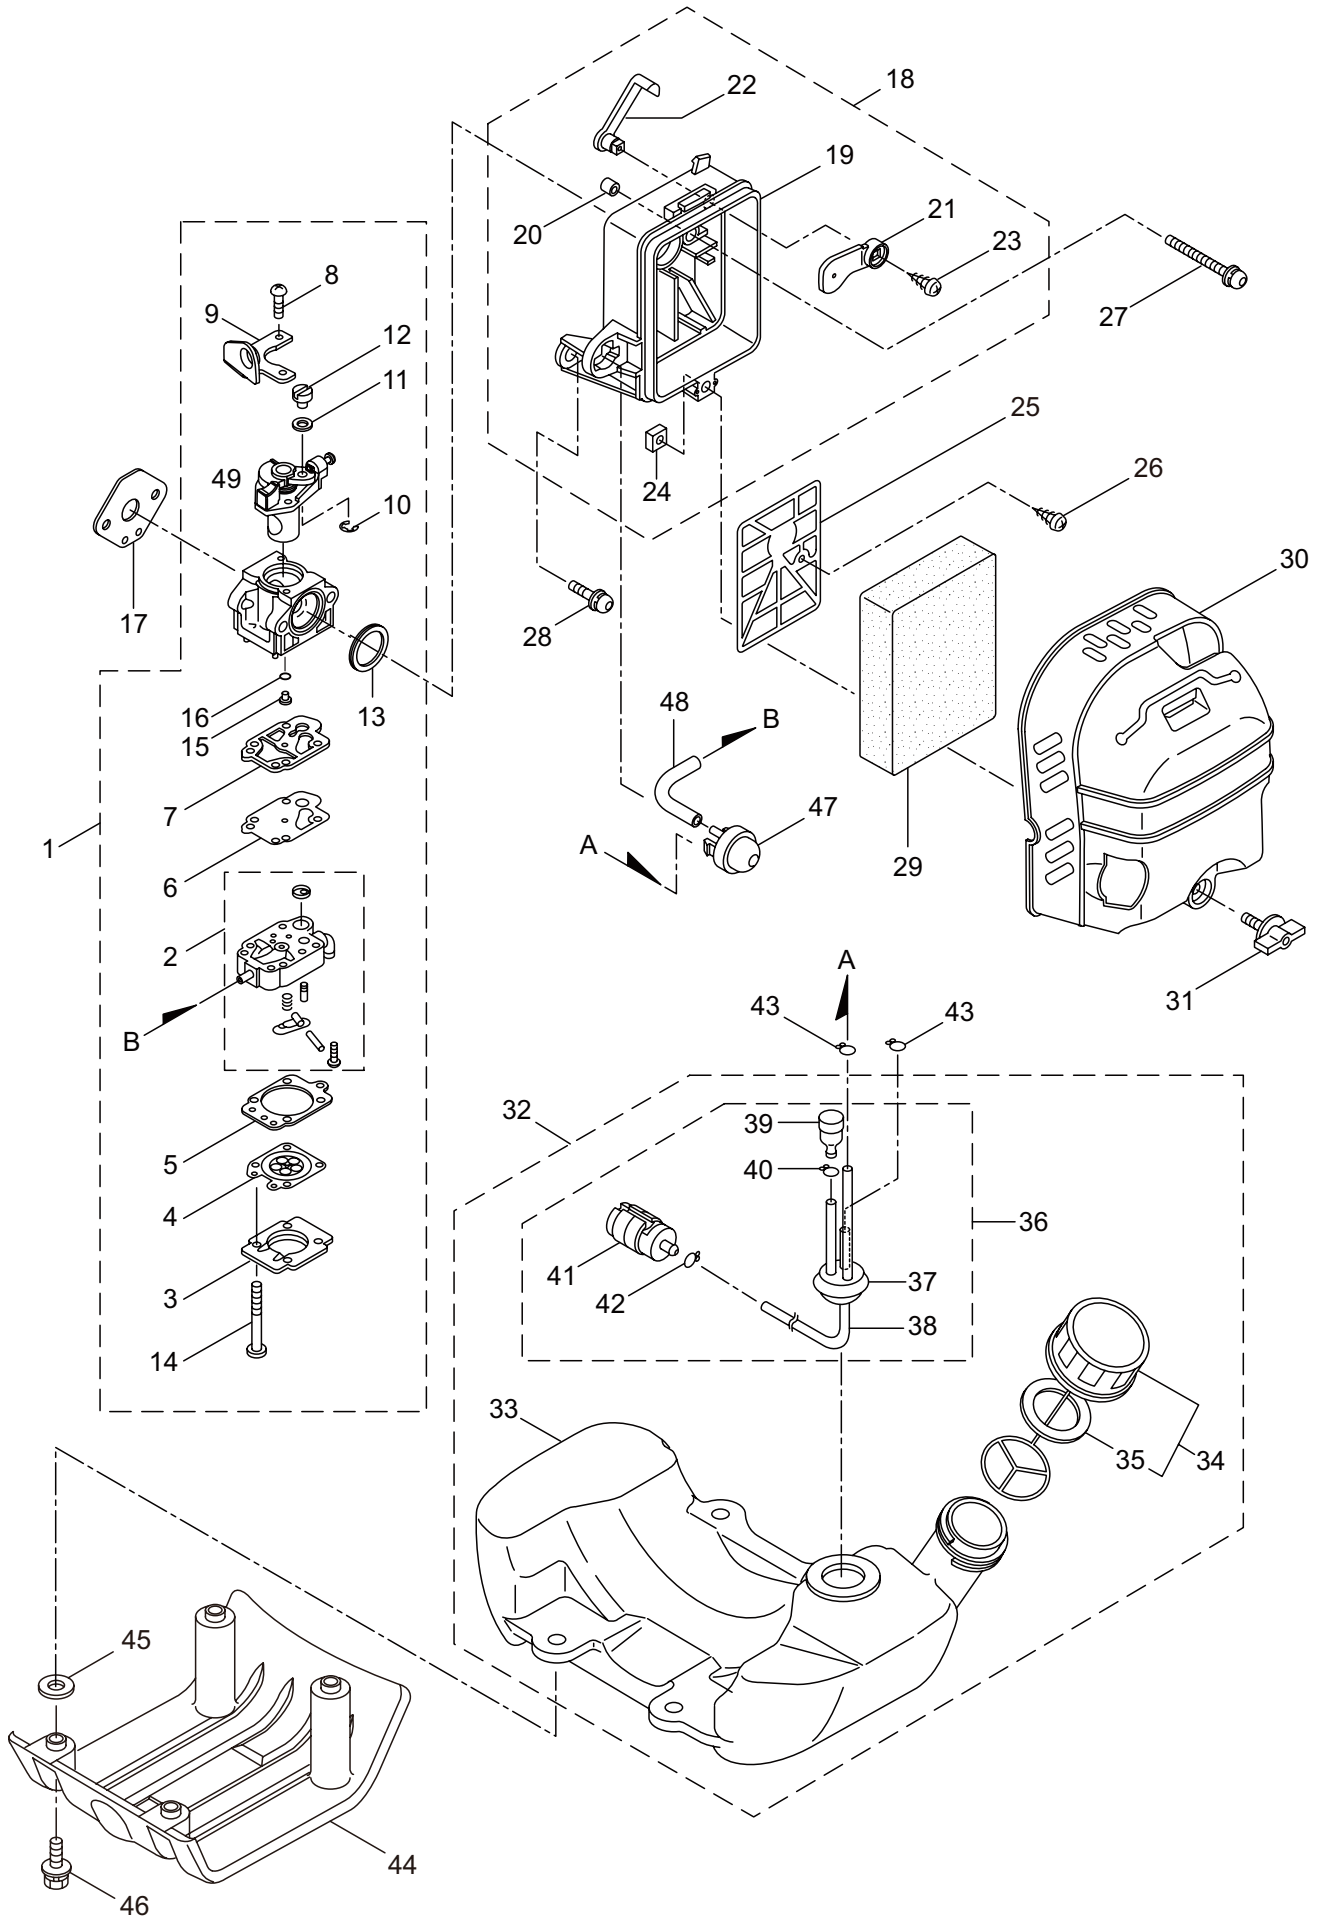

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-46	281714	Cap Screw	4	M5x20
4-47	282299	Pump	1	
4-48	282512	Fuel Pipe	1	
4-49	8712678	KK23002AA306 VALVOLA GAS v regolata	1	

5. BC5021H-RS(EU01)/BC5021H-RS(1P)  
ACCESSORIES

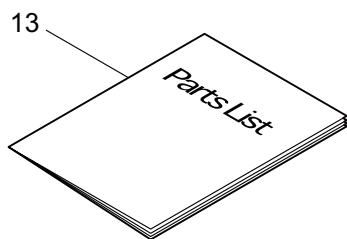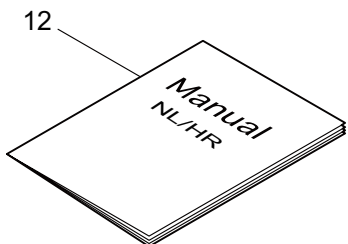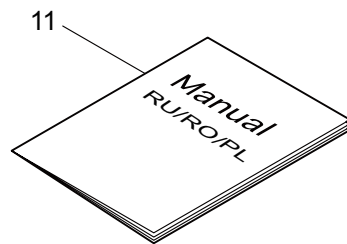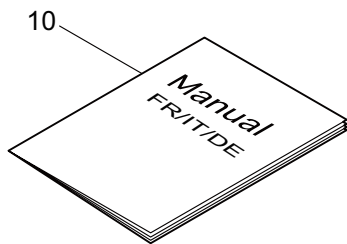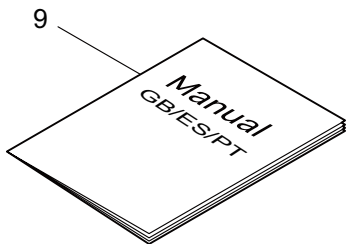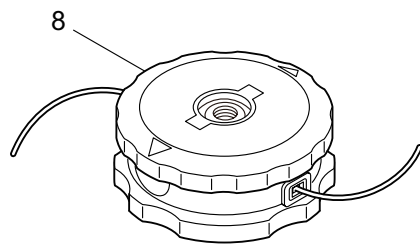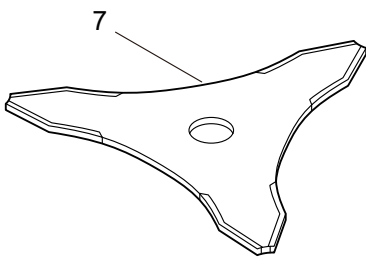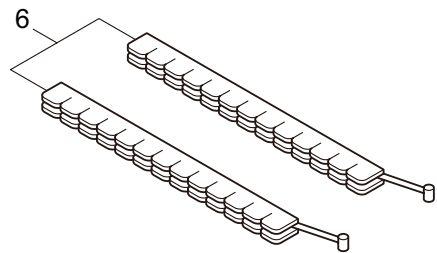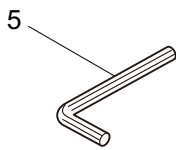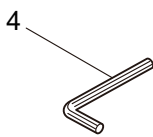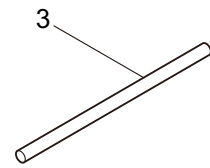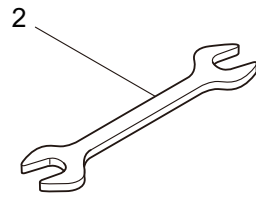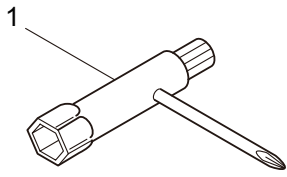

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	228008	Box Spanner	1	17x19x(+)
5-2	054756	Double-ended Wrench	1	10x13
5-3	212300	Lever Handle	1	6x100L
5-4	219432	Wrench	1	4mm
5-5	219433	Wrench	1	5mm
5-6	220534	Blade Cover	1	
5-7	227910	3-Teeth Blade	1	
5-8	234901	Semi-Auto Head (L)	1	
5-9	241580	Instruction Manual	1	GB/ES/PT
5-10	241581	Instruction Manual	1	FR/IT/DE
5-11	241582	Instruction Manual	1	RU/RO/PL
5-12	241704	Instruction Manual	1	NL/HR
5-13	524758	Parts List	1	BC5021H-RS